

### KOGANEI

### **ACTUATORS GENERAL CATALOG**



### MT SLIDE TABLES **CONTENTS**

eatures —	997
Specifications —	999
Drder Codes ————————————————————————————————————	1000
Dimensions ————————————————————————————————————	1001
Handling Instructions and Precautions ————	1004


# More precision



We have added advanced positioning precision and high rigidity to the pneumatic actuator.

The Koganei Alpha Series further enhances the drive module concept, supporting superior applications and labor savings in FA line design and manufacturing with higher performance.

## MT SLIDE TABLES

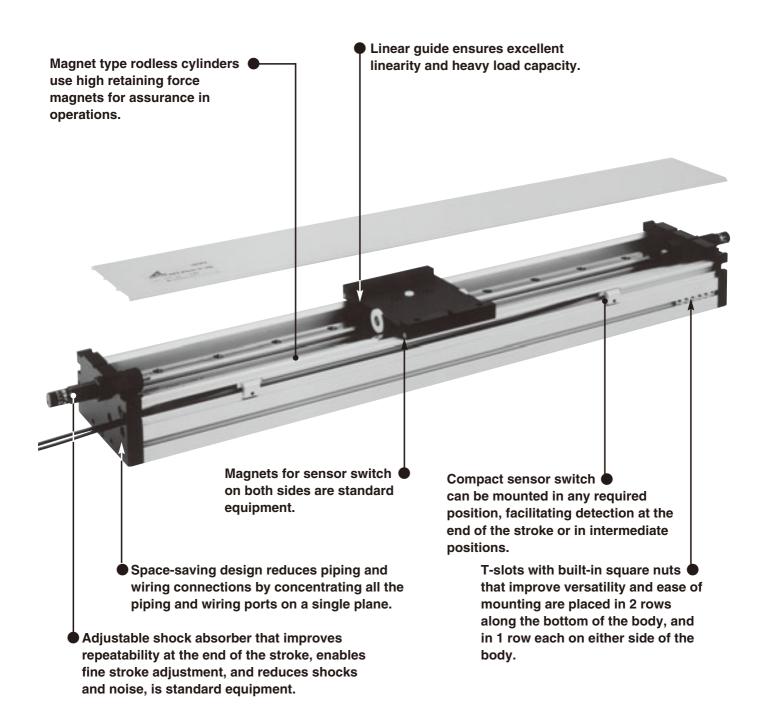




The Alpha Series MT slide table installs a high retaining force magnet type rodless cylinder and linear guide within a slim, thin-type body. This high-performance actuator offers superior positioning accuracy, linearity, and heavy load capacity.

#### Cylinder offers reliability, high-speed operation, and longer strokes.

The actuator uses a high retaining force magnet type rodless cylinder. Standard type offers long strokes of up to 1200mm (with bore size of  $\phi$ 25 [0.984in.]). Moreover, a fast operating speed range of 200  $\sim$  800mm/s [7.9  $\sim$  31.5in./sec.] brings about a highly effective system with faster tact time.



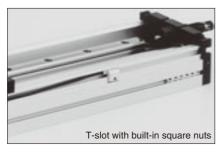

# Adjustable shock absorber enables high-speed operation and is standard equipment.

The repeatability at the end of the stroke has been further improved, and an adjustable shock absorber that greatly reduces shocks and noise is standard equipment.



# High precision linear guide offers heavy load capacity and high linearity.

High precision linear guide is installed within a thin and compact body. Responds to large loads and bending moment to assure high linearity.




# Concentrated placement of piping and wiring offers space-saving design.

The air piping connection port and the wiring outlet for the sensor switch are concentrated on a single plane for compact piping and wiring that allows rational space-saving equipment design.



# Instantly and easily responds to more flexible and accurate drive controls.

Because built-in magnets for sensor switch are standard, mounting sensor switches is all that is needed to enable detection at the end of the stroke or intermediate position.

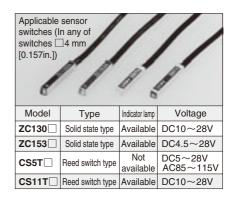

### MT SLIDE TABLES

### **Specifications**

	Model					
Item		AMT10	AMT16	AMT25		
Bore size	mm [in.]	10 [0.394]	16 [0.630]	25 [0.984]		
Operation type			Double acting type			
Media			Air			
Operating pressure range	MPa [psi.]		0.2~0.7 [29~102]			
Proof pressure	MPa [psi.]	1.03 [149]				
Operating temperature range	°C [°F]		0~60 [32~140]			
Operating speed range	mm/s [in./sec.]	200~800 [7.9~31.5]				
Cushion			With shock absorbers (Both sides)			
Lubrication	Cylinder portion	Not required (If lubrication	is required, use Turbine Oil Class 1	[ISO VG32] or equivalent.)		
Lubrication	Guide portion	Required (Lithium soap-based grease) Note1				
Repeatability	mm [in.]		±0.05 [±0.002]			
Parallelism Note2	Parallelism Note2 mm [in.] 0.2 [0.008]					
Stroke adjusting range (To the specified	strokes) mm [in.]	-48~+2 [-1.890~+0.079]	-38~+2 [-1.496~+0.079]	-42~+2 [-1.654~+0.079]		
Maximum load capacity Note3	N [lbf.]	49.0 [11.0]	98.1 [22.1]	245.2 [55.1]		
Port size		M5×0.8 Rc1/8				

Notes: 1. Apply lithium soap-based grease on the raceway surface of the track rail every 6 months or every 300km [186mi.] of traveling distance.

#### **Shock Absorber Specifications**

Item	Model	KSHM5×8	KSHM6×10	KSHM8×10
Applicable cylinder		AMT10	AMT16	AMT25
Maximum absorption	J [ft·lbf]	1.5 [1.11]	2.9 [2.14]	5.9 [4.35]
Absorbing stroke	mm [in.]	8 [0.315]	10 [0.394]	10 [0.394]
Maximum impact speed mn	n/s [in./sec.]		1000 [39.4]	
Maximum operating frequency	cycle/min		30	
Spring return force (At the retracted position)	N [lbf.]	5.59 [1.257]	9.22 [2.073]	15.69 [3.527]
Angle variation			3° or less	
Operating temperature range	°C [°F]		0~60 [32~140]	

Remark: The above models can be ordered separately by using the order codes.

#### **Bore Size and Stroke**


		mm
Bore size	Standard strokes	
10	200, 250, 300, 350, 400, 450, 500	
16	200, 250, 300, 350, 400, 450, 500, 550, 600, 800, 1000	
25	200, 250, 300, 350, 400, 450, 500, 550, 600, 800, 1000, 1200	

#### Mass

● Mass of slide table g [oz.]												
Stroke mm Bore size mm	200	250	300	350	400	450	500	550	600	800	1000	1200
10	1780 [62.79]	1990 [70.19]	2210 [77.95]	2420 [85.36]	2640 [93.12]	2850 [100.53]	3070 [108.29]	_	_	_	_	_
16	2670 [94.18]	2960 [104.41]	3200 [112.87]	3460 [122.05]	3730 [131.57]	3990 [140.74]	4260 [150.26]	4520 [159.44]	4790 [168.96]	5850 [206.35]	6910 [243.74]	_
25	5540 [195.41]	5950 [209.88]	6390 [225.40]	6810 [240.21]	7240 [255.38]	7660 [270.19]	8090 [285.36]	8510 [300.18]	8940 [315.34]	10640 [375.31]	12340 [435.27]	14080 [496.65]

Additional ma	ss of options	g [oz.]	
Bore size	Foot mounting	Sub-plate	Sensor switch (1 pc.)
mm [in.]	brackets (2 pcs.)	Sub-plate	ZC130□,ZC153□,CS5T□,CS11T□
10 [0.394]	34 [1.20]	110 [3.88]	20 [0.71]
16 [0.630]	55 [1.94]	212 [7.48]	20 [0.71]
25 [0.984]	115 [4.06]	404 [14.25]	20 [0.71]


<sup>2.</sup> This is the parallelism between the table's upper surface and the bottom surface of the body. It is not the same as the traveling parallelism. 3. For the relationship between mass and piston speed, see the shock absorber capacity graph on p.1000.

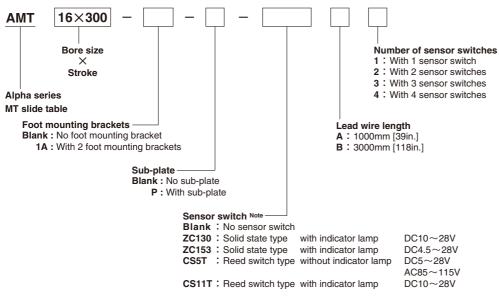


Note: Mount the sensor switch so that the surface showing the model marking faces down.

● For details of sensor switches, see p.1544.

#### Order codes for options only

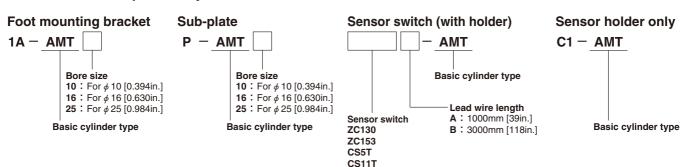


#### **Shock Absorber Capacity Graph**

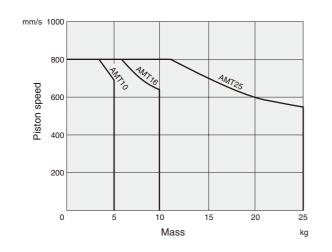

1 mm/s = 0.0394 in./sec.1kg = 2.205lb.

#### **Allowable Bending Moment**

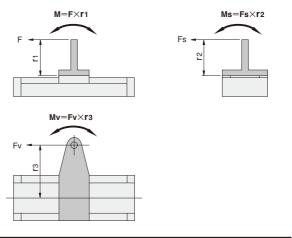



Bore size mm [in.]	Maximum pitching moment M N·m [ft·lbf]	Maximum rolling moment Ms N·m [ft·lbf]	Maximum yawing moment Mv N·m [ft·lbf]
10 [0.394]	2.94 [2.17]	2.94 [2.17]	2.94 [2.17]
16 [0.630]	6.86 [5.06]	4.90 [3.61]	6.86 [5.06]
25 [0.984]	24.52 [18.09]	14.71 [10.85]	24.52 [18.09]

#### 



Drawings show specification strokes.

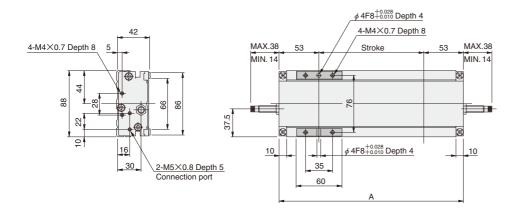


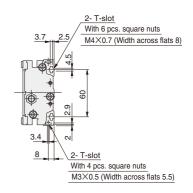



Stroke Code	Α
200	306
250	356
300	406
350	456
400	506
450	556
500	606




















#### 



Drawings show specification strokes.

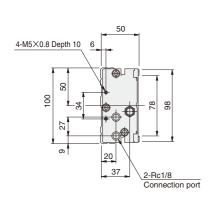


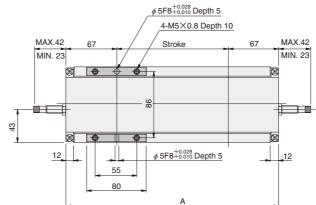

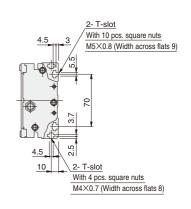



Stroke Code	Α
200	334
250	384
300	434
350	484
400	534
450	584
500	634
550	684
600	734
800	934
1000	1134





#### ■Sub-plate: -P







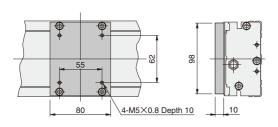


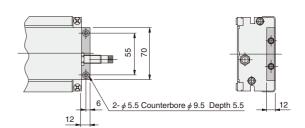


#### 




Drawings show specification strokes.

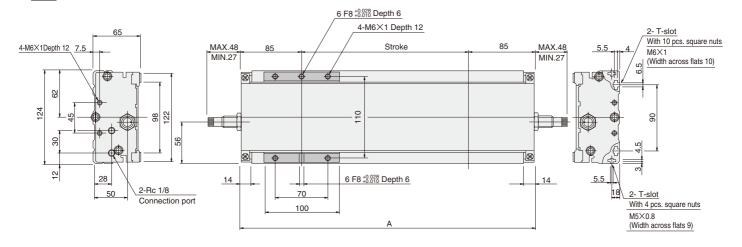



Stroke Code	Α
200	370
250	420
300	470
350	520
400	570
450	620
500	670
550	720
600	770
800	970
1000	1170
1200	1370



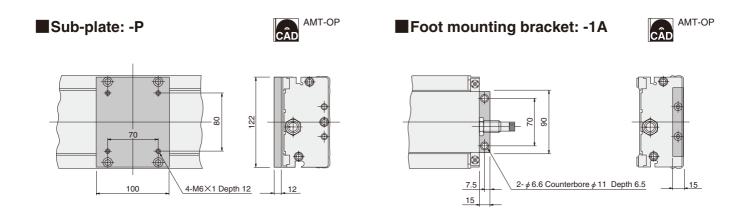




#### Mounting

#### Mounting


- Because a rodless cylinder that uses strong magnets is built into the body of the MT slide table, avoid using it in locations exposed to cutting oil or dust that includes magnetic particles, and in ambient atmospheres that are full of dust.
- 2. Whenever external force greater than the retaining force of magnet on the magnet type rodless cylinder causes the slider and piston to misalign or separate, make the piston return to the end of the stroke and then apply force to restore the slider to its correct position.

#### **Body mounting**

- 1. To mount the body, use the square nuts in the 2 rows of T-slot on the bottom. Mounting is allowed in any direction.
- Avoid using square nuts in T-slots on the sides of the body to mount.

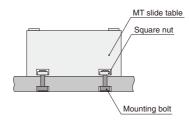

**3.** For the screw length of the mounting bolt used with the square nut, the recommended lengths are shown below.



#### Screw length ℓ

mm [in.]

Model	AMT10	AMT16	AMT25
Bottom	M4	M5	M6
	t+6 [0.236]	t+7 [0.276]	t+9 [0.354]
Side	M3	M4	M5
	t+5 [0.197]	t+6 [0.236]	t+7 [0.276]

The tightening torque for the mounting bolt should be as shown below.

#### Tightening torque

N·cm [in·lb

N-cm [in-						
Model Locations	AMT10	AMT16	AMT25			
Bottom	137 [12.1]	265 [23.5]	441 [39.0]			
	(M4)	(M5)	(M6)			
Side	59 [5.2]	137 [12.1]	265 [23.5]			
	(M3)	(M4)	(M5)			



#### Shock absorber

#### Adjustment


- 1. Align white mark on the absorbing capacity adjusting knob to  $2{\sim}3$  on the scale.
- 2. If a residual shock appears at the end of the stroke, turn the adjusting knob towards 6 on the scale. Moreover, if it stops during mid-stroke or there are large shocks at impact, turn the adjusting knob towards 0 on the scale.
- **3.** After completing adjustment, always tighten the lock screw to secure the adjusting knob in place.



#### Sensor switch

#### Mounting location of end of stroke detection sensor switch

When the sensor switch is mounted in the locations shown below (the figures in the table are reference values), the magnet comes to the maximum sensing location of the sensor switch at the end of the stroke.



mm [in.]

Sensor switch	AMT10		AMT16		AMT25	
	Α	В	Α	В	Α	В
ZC130, ZC153	9.5 [0.374]	17.5 [0.689]	13.5 [0.531]	21.5 [0.846]	21.5 [0.846]	29.5 [1.161]
CS5T	11 [0.433]	19 [0.748]	15 [0.591]	23 [0.906]	23 [0.906]	31 [1.220]
CS11T	10.5 [0.413]	15.5 [0.610]	14.5 [0.571]	19.5 [0.768]	22.5 [0.886]	27.5 [1.083]

Caution: Mount the sensor switch so that the surface showing the model marking faces down.



#### **General precautions**

#### Piping

Always thoroughly blow off (use compressed air) the tubing before connecting it to the cylinder. Entering chips, sealing tape, rust, etc., generated during piping work could result in air leaks or other defective operation.

#### Atmosphere

- If using in locations subject to dripping water, dripping oil, etc., or to large amounts of dust, use a cover to protect the unit.
- The product cannot be used when the media or ambient atmosphere contains any of the substances listed below.
   Organic solvents, phosphate ester type hydraulic oil, chlorine gas, or acids, etc.

#### Lubrication

The inside of the cylinder of this product can be used without lubrication, if lubrication is required, use Turbine Oil Class 1 (ISO VG32) or equivalent.

Avoid using spindle oil or machine oil.

Regular greasing is required for the cylinder's outer surface.

Apply the recommended grease every 300km [186mi.] of traveling distance.

Recommended grease: Lithium soap-based grease

#### Media

- 1. Use air for the media. For the use of any other media, consult us.
- 2. Air used for the cylinder should be clean air that contains no deteriorated compressor oil, etc. Install an air filter (filtration of a minimum 40 µm) near the cylinder or valve to remove collected liquid or dust. In addition, drain the air filter periodically.